

Introduction

Congratulations on your purchase of the XP SC1200-BL Brushless Electronic Speed Control (ESC). The latest electronics technology along with the design and engineering experience that is responsible for multiple World Championship titles has been incorporated into its design

The XP SC1200-BL Brushless ESC is water-resistant for maximum durability. Its light and compact design allows for easy installation in most 1/10 vehicles. Simple calibration and a wide variety of tuning options make this ESC perfect for both casual enthusiast and racers. When paired with a Reedy Brushless Motor, you create a potent combination of power and efficiency that brings performance to a new level. More power and less maintenance elevate the fun factor by increasing top speeds and reducing down time.

Please read the following instructions before installing and operating your ESC.

Features

- Adjustable LiPo Low-Voltage Cutoff

- Adjustable LIPO Low-Voltage Cuto
 LiPo Cell Auto Detect
 Reversible with Reverse Lockout
 Fully Proportional Brakes
 Adjustable Drag Brakes
 Adjustable Throttle Profile
- Hard Case with Aluminum Heat Sink Water Resistant

- veater Resistant
 Heavy Duty Silicone Wires
 Deans® Ultra Plug® Connector
 3.5mm Motor Connectors
 Pre-Wired for Optional Cooling Fan

Specifications

Cells	2-3 LiPo, 6-8 NiMH	
On Resistance	0.5 mΩ × 2	
Brakes	Proportional	
Motor Limit	2 LiPo, 5500kV ; 3 LiPo, 4000kV	
Reversible	Yes, w/Brakes Only Option	
Low Voltage Cutoff	Adjustable, w/Cell Auto-Detect	
Dimensions	46mm x 42mm x 26mm	
Weight w/Wires	100g (3.5oz)	
Power Wires	12-Gauge Silicone	
Connector Type	Battery/Deans®	
	Motor/3.5mm sockets	

Installation

 \oplus

- Mount your ESC securely using high quality double-sided tape.
- · Install your ESC in a position that allows easy access to all connectors.
- · Plug the ESC's receiver wire into the receiver (refer to radio manufacturer's manual).
- · To prevent radio interference, arrange ESC wiring so that it is not in close proximity to the receiver antenna wire.
- Connect the three motor leads exiting the ESC to the three leads exiting your motor. If the motor runs backwards when giving it forward throttle, reverse any two motor leads. The motor will now run the desired direction.
- · Mount the switch to the case using the tab provided.
- · Always power ON your transmitter before the ESC, and power OFF the ESC before the transmitter.

Safety Precautions

This product is a sophisticated hobby product and not a toy. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this product in a safe and responsible manner could result in injury or damage to the product or property. This product is not intended to be used by children without direct adult supervision. It is essential to read and follow all instructions and warnings product to operate properly and to avoid damage or injury.

Throttle Calibration

Your new ESC must be calibrated before use. Before calibration, be sure to set your radio's throttle and brake EPAs to 100% and your throttle trim to neutral. Then follow the steps outlined below.

		Signal From ESC	
Step#	Procedure	Audio	LED
1	Power ON transmitter		
2	Throttle trigger position to maximum		
3	Power ON ESC	bibibibibibi	red static/6 green flash
4	Throttle trigger position to neutral	bibi-bibi	red static/4 green flash
5	Throttle trigger position to maximum brake	bibi-bibi	red static /4 green flash
6	Throttle trigger position to neutral		red static
7	Power OFF ESC		
8	Power OFF transmitter		

Once the calibration procedure is complete, turn on your transmitter, then your ESC, and begin operating your vehicle. Note: If you choose to make settings adjustments at this time, you can do so immediately after step #6 of the throttle calibration procedure.

Programmable Settings

Your ESC comes pre-programmed and can be used immediately. But you can also change the settings based on the type of vehicle and battery used as well as personal performance preferences based on the track you are driving on and your driving style.

Drag Brake - Drag brake is the amount of braking achieved when the throttle is returned to neutral. A setting of 0% means the vehicle will free wheel to a stop while higher settings will stop the car faster. Please note that regardless of the drag brake setting, you will still be able to use the brake trigger to manually slow the car. This push brake action can be adjusted by changing your transmitter's brake EPA setting.

Throttle Profile - This setting adjusts the power delivery of your ESC/motor combination. The Very Soft setting can be used on loose or bumpy track to reduce wheel spin while the Maximum setting works well when high traction is available. Four settings provide options for any track condition

Run Mode - This gives the option of using reverse or eliminating it completely (for competition). Reverse can be engaged after the vehicle has come to a complete stop and the throttle trigger is returned to neutral. At this time, reverse can be engaged by pushing back on the trigger. Forward can be engaged once the reversing vehicle has come to a complete stop and the throttle trigger is returned to neutral.

Battery Management System - A choice of either LiPo mode or NiMH mode adjusts the low voltage cutoff point. This is particularly important when using LiPo batteries that should not, for performance and safety reasons, be discharged below 3.0V per cell. In LiPo mode, the ESC detects whether you are using 2 or 3 cells and adjusts the cutoff accordingly.

To make settings adjustments, you must first follow the calibration procedure. After step #6, you will encounter a 5-second delay before entering the settings adjustment mode. All changes will be made using your transmitter's throttle trigger. Note: Once you enter the settings adjustment mode, the ESC will scroll through all options. If you fail to choose a setting, the ESC will keep the previously saved setting

For example, if you want to change the throttle profile from Soft to Standard, enter the settings mode. You will encounter the Battery Management System and Drag Brake modes first at which time you can let the ESC scroll through the choices (the previously saved setting will be kept) until you reach the Throttle Profile choices. You must make the selection by pulling the throttle trigger to maximum after the ESC scrolls to the desired setting (in this case Standard) indicated by the appropriate audible tones. Once this setting (or any setting for that matter) is chosen, you can skip to Step #5 if no other

·		Signal From ESC	
Procedure	Audio	LED	
Battery Management System			
NiMH 4.5V Cut-Off	1-1		
LiPo 3.0V/Cell Cut-Off (default)	1-11	red static/green flashes	
Throttle trigger position to maximum to select value	bibi-bibi	red static/4 green flash	
Throttle position to neutral		red static	
Drag Brakes			
0%	11-1		
2.5% (default)	11-11		
5%	11-111		
10%	11-1111	red static/green flashes	
Throttle trigger position to maximum to select value	bibi-bibi	red static/4 green flash	
Throttle position to neutral		red static	
Throttle Profile			
Very Soft	111-1		
Soft (default)	111-11		
Standard	111-111		
Maximum	111-1111	red static/green flashes	
Throttle trigger position to maximum to select value	bibi-bibi	red static/4 green flash	
Throttle position to neutral		red static	
Run Mode			
Reverse Off (Forward Only)	1111-1		
2-Stage Reverse (default)	1111-11		
Throttle trigger position to maximum to select value	bibi-bibi	red static/green flashes	
Throttle position to neutral		red static/4 green flash	
Power OFF ESC and transmitter			
Power ON transmitter and ESC	melody bi-bi	2 red flash/green static	
Power ON transmitter and ESC	melody bi-bi	2 red flash/green stat	
	Battery Management System NiMH 4.5V Cut-Off LiPo 3.0V/Cell Cut-Off (default) Throttle trigger position to maximum to select value Throttle position to neutral Drag Brakes 0% 2.5% (default) 5% 10% Throttle trigger position to maximum to select value Throttle position to neutral Throttle Profile Very Soft Soft (default) Standard Maximum Throttle trigger position to maximum to select value Throttle position to neutral Run Mode Reverse Off (Forward Only) 2-Stage Reverse (default) Throttle trigger position to maximum to select value Throttle trigger position to maximum to select value Throttle trigger position to neutral	Procedure Battery Management System NiMH 4.5V Cut-Off LiPo 3.0V/Cell Cut-Off (default) Throttle trigger position to maximum to select value Drag Brakes 0% St-f 2.5% (default) 5% 10% Throttle trigger position to maximum to select value Throttle position to maximum to select value Throttle trigger position to maximum to select value Throttle Profile Very Soft Soft (default) Standard Maximum Throttle trigger position to maximum to select value Bibi-bibi Throttle trigger position to maximum to select value Standard Maximum Throttle trigger position to maximum to select value Bibi-bibi Throttle trigger position to maximum to select value Throttle trigger position to maximum to select value Bibi-bibi Throttle trigger position to maximum to select value Dibi-bibi Throttle trigger position to maximum to select value Dibi-bibi Throttle trigger position to maximum to select value Dibi-bibi Throttle trigger position to maximum to select value Dibi-bibi	

 \oplus

Warranty

 \oplus \oplus

Your XP Electronic Speed Control is warranted to the original purchaser for 30 days from the date of purchase, verified by the sales receipt, against defects in material and workmanship. Product that has been mishandled, abused, used incorrectly, used for an application other than intended, or damaged by the user are not covered under warranty.

Associated Electrics Inc. is not liable for any loss or damage, whether direct or indirect, incidental or consequential, or from any special situation, arising from the use, misuse, or abuse of this product.



Associated Electrics, Inc. 26021 Commercentre Dr. Lake Forest, CA 92630 USA www.teamassociated.com

www.rc10.com call: (949) 544-7500

fax: (949) 544-7501