

#29267 XP 4 LED Roof Light Set

#29268 XP 6 LED Roof Light Set

Installation:

1) Carefully trim all parts from their respective parts trees.

2) To install the LED Lights, insert the 3mm LED into the center hole from the back of each light canister before screwing the canister to the mounting plate. Using the 6 - M3x8mm flathead screws, screw the four light canisters to the Mounting plate. Position the canisters with the mounting posts toward the top of the light bar.

3) You have the option of just using the canisters as is with no lenses or guards. If you wish to use the lenses, use either model cement or a pliable silicone glue (preferred) and place a small amount of adhesive on the shoulder of the canister then press the lenses onto that shoulder fully (the lenses must rest on the shoulder fully otherwise the guard won't seat properly). Be extremely cautious with the lenses. They can crack if too much pressure is applied. If you wish to use the guards, place a small amount of adhesive on the front face of the canister and press the guard in place, using caution to position the guard any way you prefer before the glue sets up. Allow the adhesive to fully cure before proceeding.

4) Using the 3 - M3x10mm screws, attach the Mounting Plate to the Light Bar.

5) There are a couple of options available depending upon where you intend to mount the light bar. The longer leg of the Body Mount can be mounted in either direction (up or down, down is shown in the illustration). Once you determine how you want the Body mounts to sit, use the 2 - M3x16mm button head screws to attach the Body Mounts to the Light bar. Leave these hinge screws slightly loose for now.

6) The Roof Mount Light set can be Mounted almost anywhere on the truck. However, mounting the light set on top of the body will be most susceptible to damage. We recommend attaching the light set to either the front or rear window. Mounted in this fashion, there is a lower probability of damage due to the collapsible design of the lights. Use the drill guide located below drill 4 - 2.5mm diameter holes through the body. Use caution when positioning the drill guide making sure the holes will be centered and symmetrical from left to right, top to bottom and front to back.

7) Using the 4 - M2.5x12mm bottom head screws, slip each screw through the Backing Plate, through the bottom side of the body and thread them into the Body Mounts. Caution: the flat side of the Backing plates should rest against the body of the vehicle.



8) Notice how the light set is free moving at the hinge screws. Position the lights to your liking and tighten the hinge screws just enough so the light bar will collapse in a crash but will stay fixed in place while driving. This hinging feature greatly improves the Light Sets chances of survival during a crash.

Caution: Double-check the polarity of the receiver plug's orientation. Crossing the polarity of the wires may damage your receiver. The receiver plug will press into any open or unused slot of the receiver.

Plug in your battery and turn on your vehicle. The LED's should illuminate once the car is on. If something isn't working, the first place to look is the polarity of the receiver plug.

[Warranty Information]

Your Team Associated LED light kit is warranted to the original purchaser for 30 days from the date of purchase, verified by the sales receipt, against defects in material and workmanship. Product that has been mishandled, abused, used incorrectly, used for an application other than intended, or damaged by the user are not covered under warranty. Associated Electrics Inc. is not liable for any loss or damage, whether direct or indirect, incidental or consequential, or from any special situation, arising from the use, misuse, or abuse of this product.

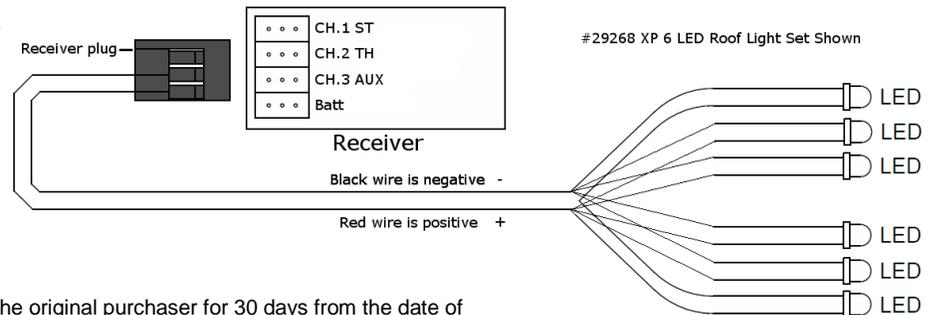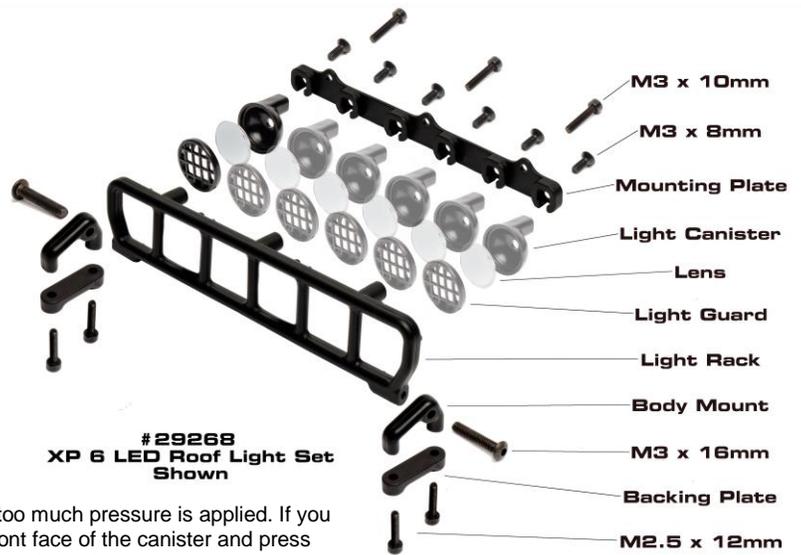

Team Associated 26021 Commercentre Dr. Lake Forest, Ca 92630 (Ph) 949-544-7500 (Fax) 949-544-7501

