


# Steering Rack Cover for the TC3

1. Use the thinnest portion of your Lexan body scrap. Lexan .030" thickness maximum.


2. Trace the template's cut and bend lines onto your plastic with a permanent fine-point marker.

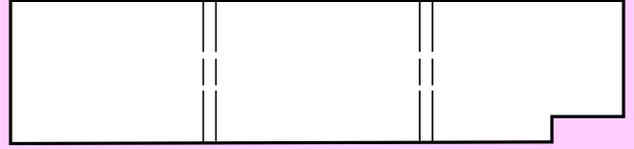


3. Cut here (bold lines).



4. Bend here (dashed lines).

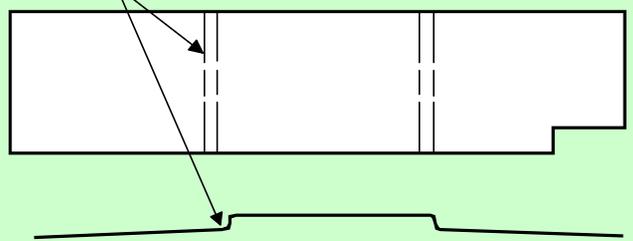

5. Drill 1/8" holes here and remove burrs.

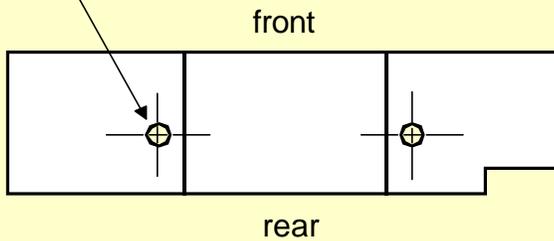

6. Install onto rack, washers underneath cover.

